


Cytronex C1 Compatibility

Lever Operated Bottle Holder Template

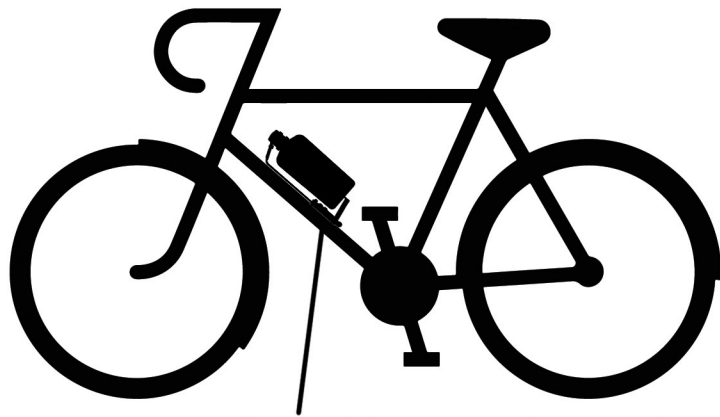

Align to bolt positions on downtube

Please print this template onto a standard sheet of A4 selecting "Actual Size" and check the dimensions are correct with a ruler. Most importantly - please check the 273.5mm dimension between the two lines.

Then align template with the bottle cage bolt holes in the top of your bike downtube, to check clearance. Recommended position is Position 1, if there is insufficient room, then position 2 can be used. If fit is tight, cut out template and try again. Standard water bottle screw hole spacing is 2.5 inches or 63.5mm, usually this is accurate, but a range from 62.5mm to 64.5mm spacing is fine.

